


KLF Compressor

SECOP



- 01 - Compressor cover
- 02 - Internal discharge tube
- 03 - Discharge cover screw
- 04 - Discharge cover gasket
- 05 - Piston
- 06 - Wrist pin
- 07 - Elastic pin
- 08 - Crankshaft
- 09 - Axial ball bearing
- 10 - Crankcase
- 11 - Discharge muffler cover
- 12 - Valve plate gasket
- 13 - Suction valve
- 14 - Valve plate
- 15 - Discharge valve
- 16 - Discharge valve booster
- 17 - Discharge valve stoper
- 18 - Cylinder head gasket
- 19 - Suction muffler
- 20 - Cylinder head
- 21 - Cylinder head screw
- 22 - Rotor
- 23 - Stator
- 24 - Stator screw
- 25 - Plastic pin
- 26 - Suspension spring
- 27 - Compressor housing
- 28 - Discharge connector
- 29 - Suction connector
- 30 - Service connector
- 31 - Hermetic terminal shield
- 32 - Hermetic terminal
- 33 - Base plate

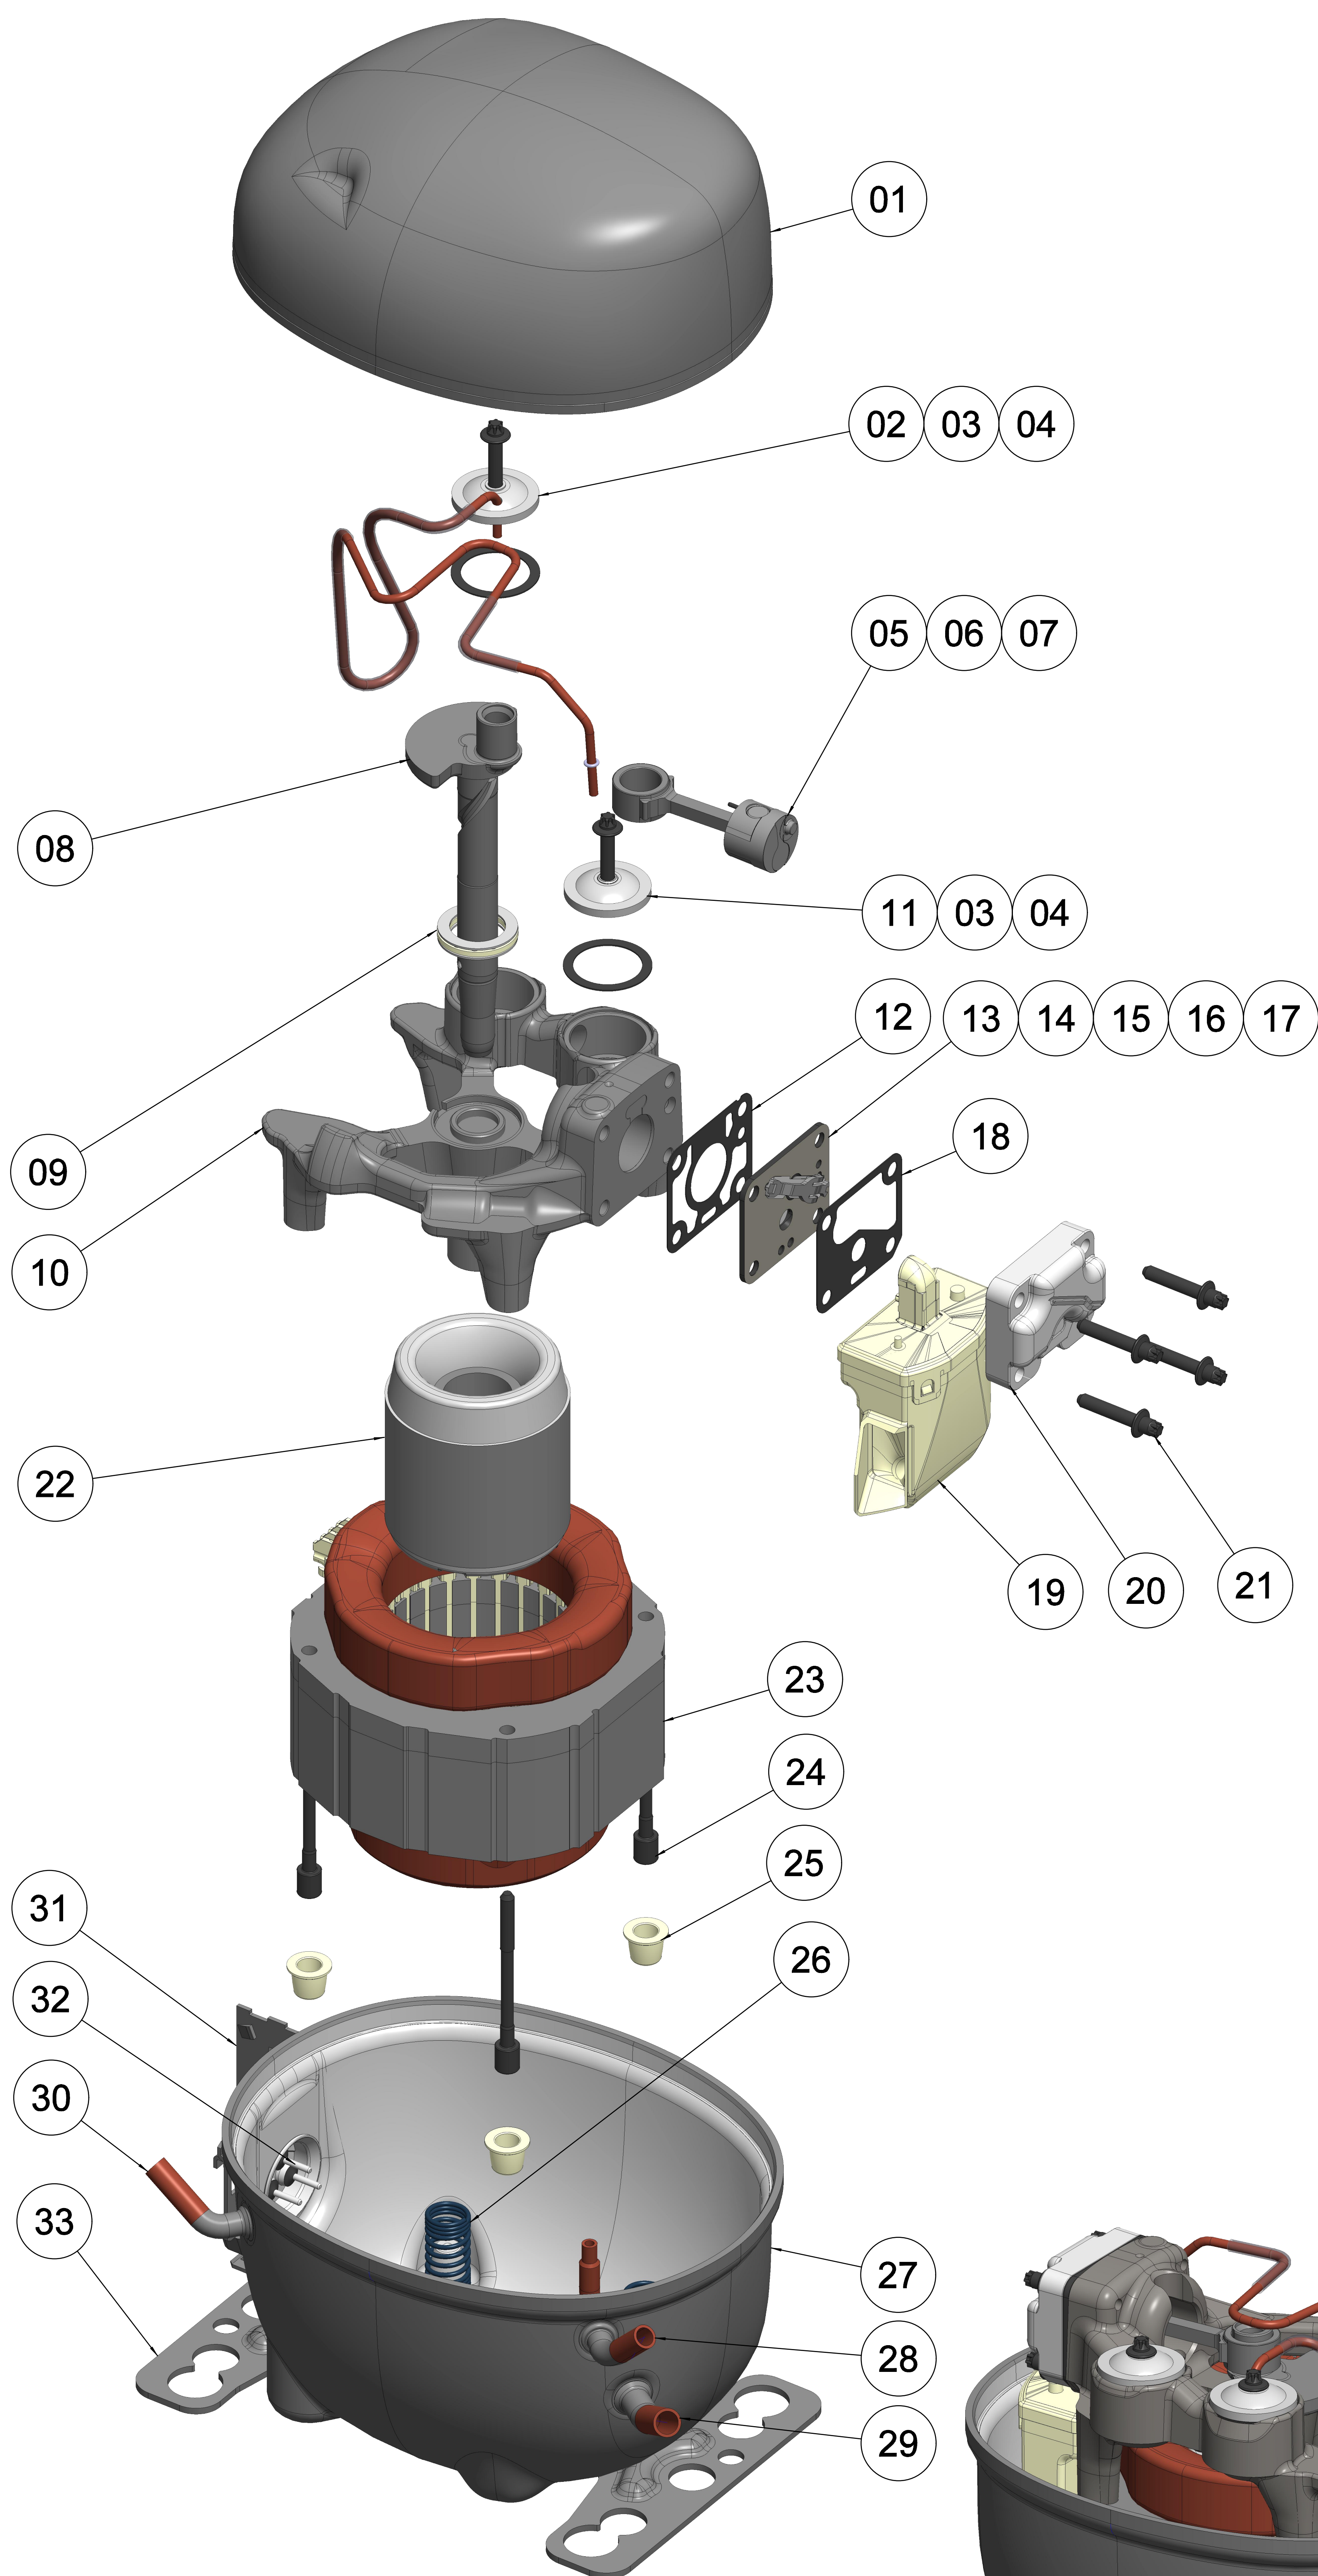